
















 












PROOVE GAMING

GEEK

Gaming Chair

# Assembly instruction

<b>A</b> x5	
<b>B</b> x1	
<b>C</b> x1	
<b>D</b> x1	
<b>E</b> x4	 M8*25mm
<b>F</b> x8	 M8*20mm
<b>F<sub>1</sub></b> x4	 M8*20mm
<b>G</b> x2	 M5*16mm
<b>H</b> x2	
<b>I</b> x1	 I <sub>1</sub>
	 I <sub>2</sub>
<b>J</b> x1	
<b>K</b> x1	
<b>L</b> x1	
<b>M</b> x1	
<b>N</b> x1	
<b>O</b> x1	 L  R
<b>P</b> x4	
<b>Q</b> x2	

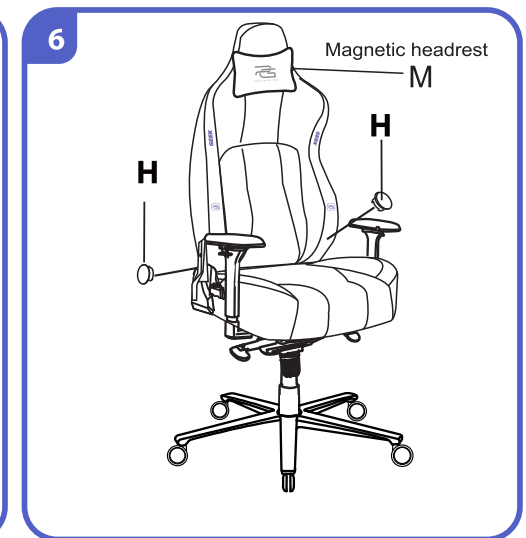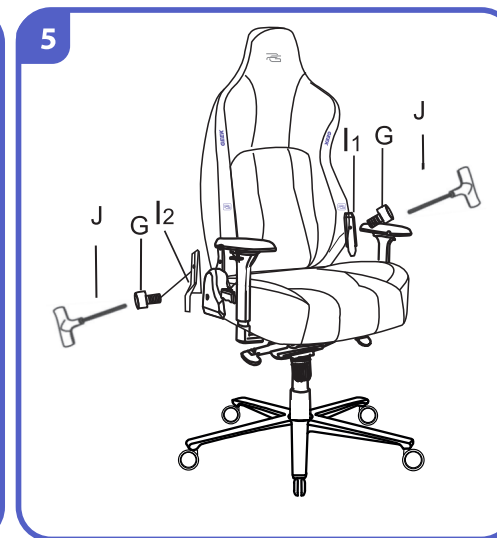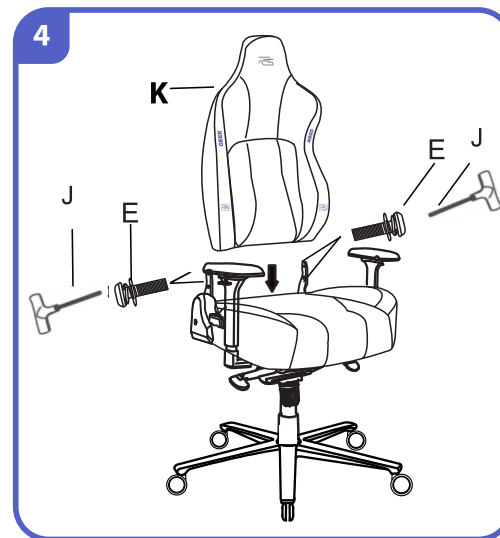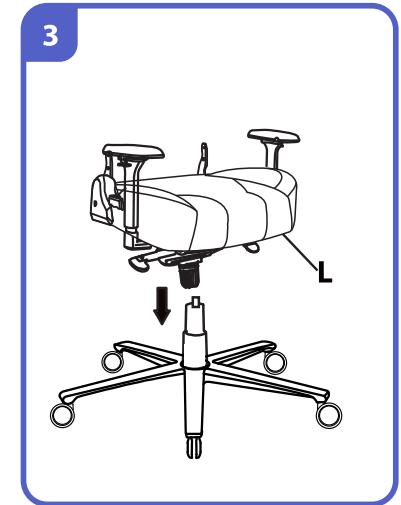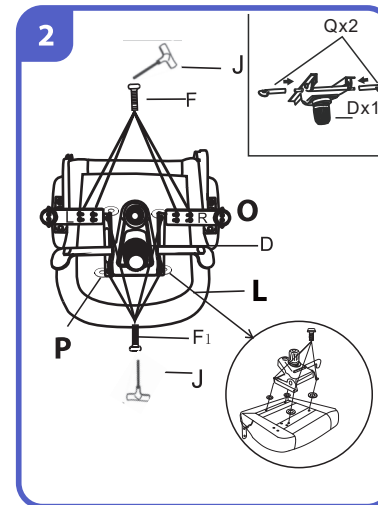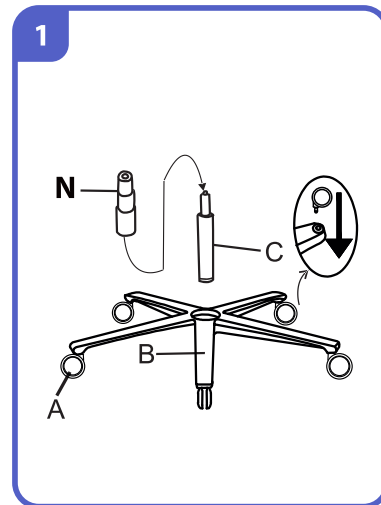

## Cleaning:

If there are stains on the surfaces of the chair, apply some polish on a soft towel and run the stains until they dissolved.  
Note: Do not apply the polish directly on the chair.

After 3 months of use, please tighten the screws again.  
Over time, the screws may loosen, which can lead to squeaks.